

Manual Brel 15-channel wall transmitter with clock Type DC-559


Read the manual before you begin the installation. If these instructions are not followed, this may lead to defects and injury in which warranty can't be claimed.

Technical specifications


Type DC-559

- | | |
|----------------------|---|
| • Battery type: | 2x CR2032 |
| • Frequency: | 433,92MHz |
| • Emission power: | 10 MW |
| • Emission distance: | 100 meter open field
2 walls 20 meter. |


Button specification

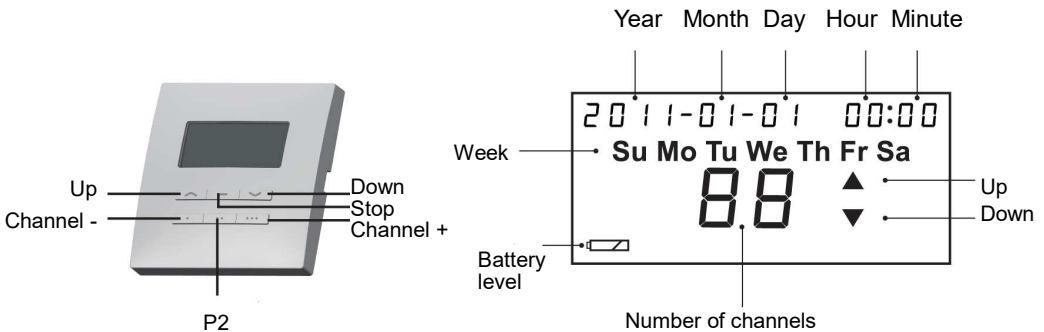


Teaching multiple transmitters

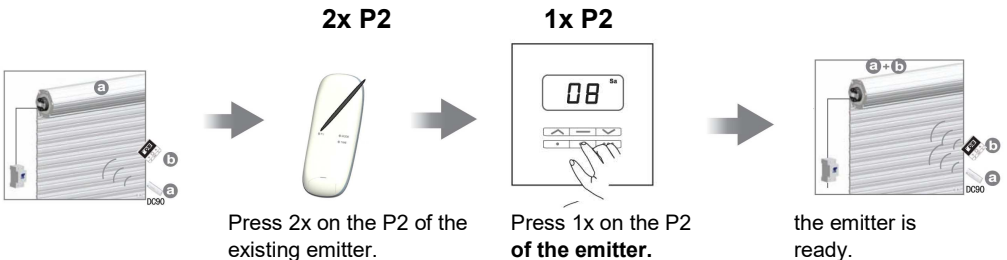

Locking function

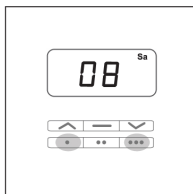


Press simultaneously
Channel - and Channel +

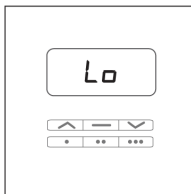


All buttons are
blocked.

In order to eliminate the blocking function you need to press the channel - and channel + buttons simultaneously for 3 seconds.


The current time setting

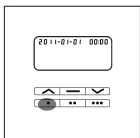


Keep channel- for 3 sec. pressed until "year" flashes.

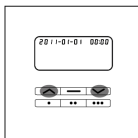


Press the up or down button to set the year.

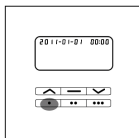


Keep channel- for 3 sec. pressed until "month" flashes.

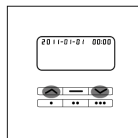


Press the up or down button to set the month.

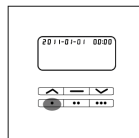


Keep channel- for 3 sec. pressed until "day" flashes.

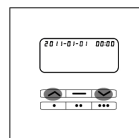


Press the up or down button to set the day.

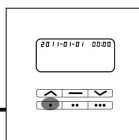


Keep channel- for 3 sec. pressed until "hour" flashes.

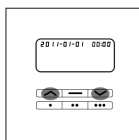


Press the up or down button to set the hour.

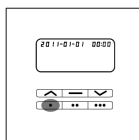


Keep channel- for 3 sec. pressed until "minute" flashes.

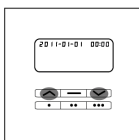

Press the up or down button to set the minutes.

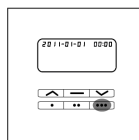

Press channel- to save.

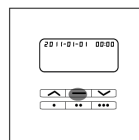

Press stop to start the time.